

## Group/Zone 14 Pike NF User Code Guard Instructions and KNG button layouts

KEYPAD #	STONE	NAC
1	110.9	\$455
2	123.0	\$4CE
3	131.8	\$526
4	136.5	\$555
5	146.2	\$5B6
6	156.7	\$61F
7	167.9	\$6BF
8	103.5	\$40B
9	100.0	\$3E8
10	107.2	\$430
11	114.8	\$47C
12	127.3	\$4F9
13	141.3	\$585
14	151.4	\$5EA
15	162.2	\$656
16	192.8	\$788
17	67.0	\$29E
18	71.9	\$2CF
19	74.4	\$2E8
20	77.0	\$302
21	79.7	\$31D
22	82.5	\$339
23	85.4	\$356
24	88.5	\$375
25	91.5	\$393
26	94.8	\$384
27	97.4	\$3CE
28	118.8	\$4A4
29	173.8	\$6CA
30	179.9	\$707
31	186.2	\$746
32	203.5	\$7F3

### LEGACY TONE SELECTION

The Tx Tone **MUST** be set **EVERY** time you change channels on the legacy radio in the UCG group.

1. Turn off Scan and Priority Scan
2. Select your channel with the channel dial
3. Refer to the chart above and select the tone for the channel you are using.
4. Press the corresponding number **1-16** for the correct tone on the radio keypad or hand mic.
5. Send your message. The display should show the letters "**cg**" in the upper right corner and display the number **1-16** that you chose.
6. **EVERY** time you change channels in the group you **MUST** change the tone to the one for the channel you are using.

### KNG TONE SELECTION

The only channel that should normally be changed in this group is channel 1.

1. Set the radio to ch 1 "**PIKE RPT**" with channel the dial.
2. Select menu button on front of radio.
3. Navigate with arrow keys to **User Tx Tones** and select **Ent**
4. Use arrow keys to select the correct tones from the list above and select **Ent**
5. Press and hold **Esc** until you go back to the home screen
6. You have set your Tx tone -- **Send your message**

The other channels in zone 12 have pre-set Tx tones and should not normally require the tone to be changed.

### KNG P150

LEFT TOGGLE	Channel Scan
RIGHT TOGGLE	Priority Scan
COLLAR SWITCH	Control Lock
ORANGE	Unprogrammed
DIAMOND	Zone Select
UP ARROW	Channel Scan
DOWN ARROW	Priority Scan
SQUARE	Menu
SIDE TOP	Backlight
SIDE BOTTOM	Nuisance Ch Del.
KEYPAD	Channel Select
ASTERISK	Ch, Add/Del
HASH	Zone Select

### BKR 5000

Vol. COLLAR SWITCH	Control Lock
ORANGE	Unprogrammed
1st But. Under Screen	Zone Select
2nd But. Under Screen	Channel Scan
3rd But. Under Screen	Priority Scan
4th But. Under Screen	Menu
Side Top	Backlight
Side Middle	Tx Tone Select
Side Bottom	Nuisance Ch Del
Keypad	Channel Select
Asterisk	Ch. Add/Del
Hash	Zone Select
A,B,C,D Switch	Clone Zn 30

### KNG2

LEFT TOGGLE	Channel Scan
RIGHT TOGGLE	Priority Scan
COLLAR SWITCH	Control Lock
ORANGE	Unprogrammed
DIAMOND	Zone Select
UP ARROW	Channel Scan
DOWN ARROW	Priority Scan
SQUARE	Menu
SIDE TOP	Backlight
SIDE MIDDLE	User Tone Select
SIDE BOTTOM	Nuisance Ch Del.
KEYPAD	Channel Select
ASTERISK	Ch, Add/Del
HASH	Zone Select

### BK M150 Mobile

Orange	Unprogrammed
Mic Side Top	Backlight
Mic Side Middle	Tx Tone Select
Mic Side Bottom	Nuisance Ch Del
F1 Button	Zone Select
F2 Button	Channel Scan
F3 Button	Priority Scan
F4 Button	Menu
Home	Home Channel/Exit
Keypad	Channel Select
Asterisk	Ch, Add/Del
Hash	Zone Select